




**PRIORITY  
STATUS**




**SUBJECT: Reserve parachute rotating inside its pocket.**


Published date : 28/06/2018

N° document : SUPAIR\_2018/06\_001

## PROBLEM DESCRIPTION

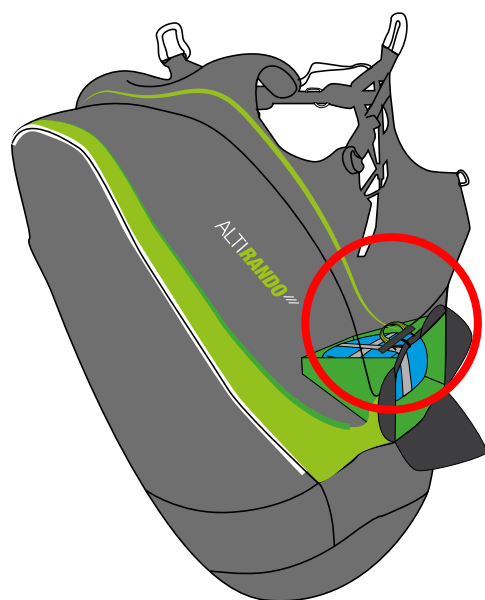

Your reserve parachute size is not adapted to your harness rescue parachute pocket.

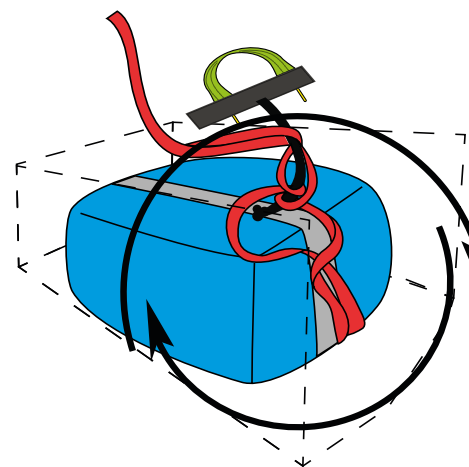

If the emergency parachute does not have a snug fit inside the rescue pocket, it could potentially rotate on itself while using the harness. The risers then roll up around the rescue parachute pod handle and prevent a deployment.

## 1 INSPECTION


**A / There is no play:** Your reserve parachute is snug inside your harness reserve parachute pocket and can not rotate on itself. Close the harness's rescue parachute pocket as it was before, and have a nice flight!

**B / There is play:** follow the necessary procedure **2** to adjust your harness's reserve parachute pocket size.



### 2 ADJUSTMENT


**A / Using the pocket sewn partition:** Adjust the partition to adjust the depth of the reserve parachute pocket according to your parachute size.

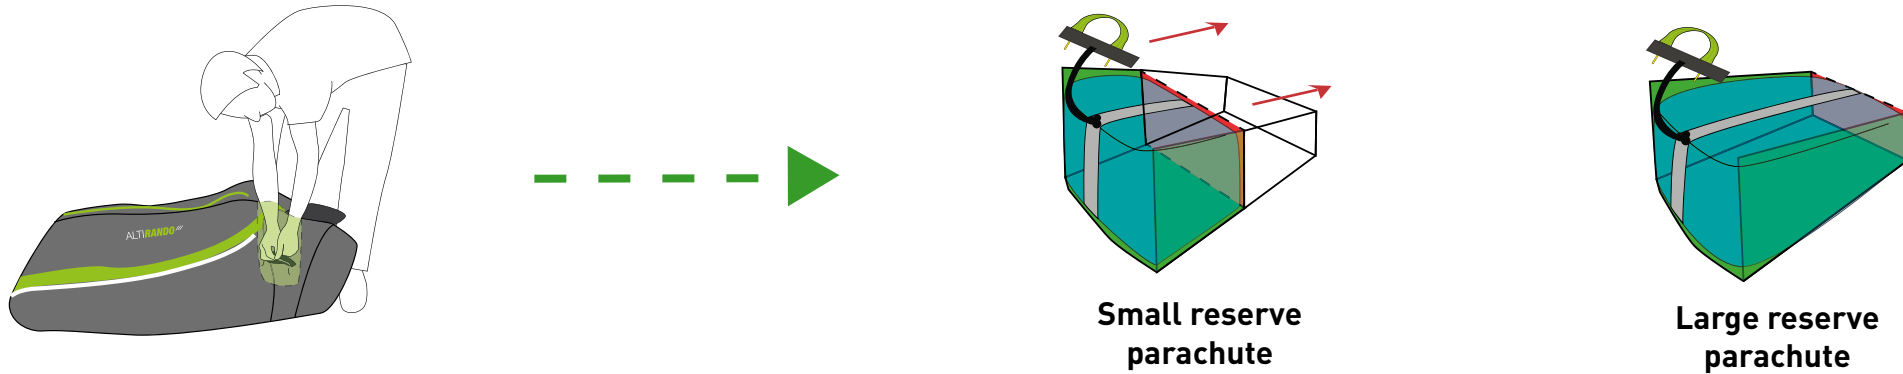

1 / After adjusting your harness rescue pocket, you notice that your parachute fits it perfectly. Close the harness rescue parachute pocket as it was before, and have a nice flight!


2 / After adjusting your rescue harness pocket, the latter becomes too small: order the partition extension at [info@supair.com](mailto:info@supair.com)

**B / Installing the extension :** If your reserve parachute extension is not compatible with the original partition (intermediate size): place the extension accordingly using the Velcro® to adjust the pocket depth to fit your reserve parachute size.

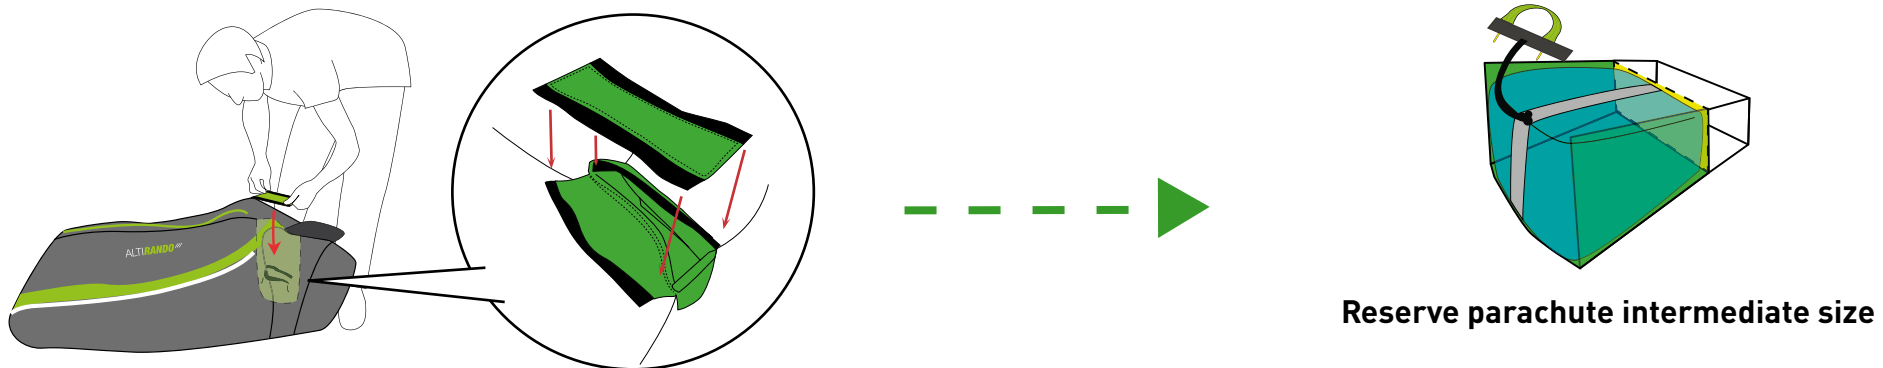



### RESERVE PARACHUTE POCKET

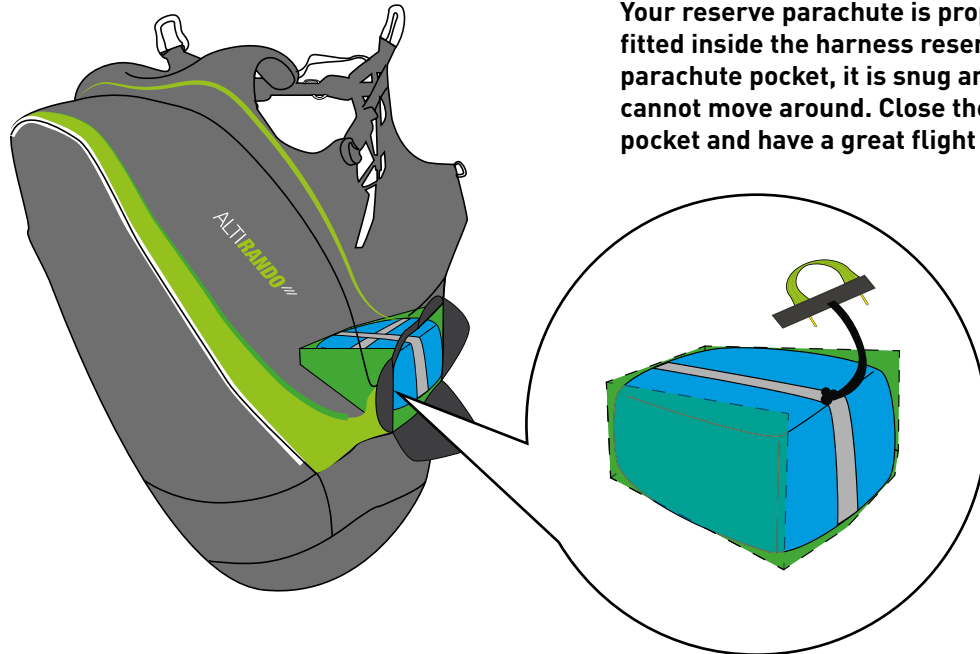

Your reserve parachute is properly fitted inside the harness reserve parachute pocket, it is snug and cannot move around. Close the pocket and have a great flight !

	Size	Volume	Poche	Cloison
<b>SUPAIR X Tralite</b>	S	2,4	Small	Original partition
	M	3,2	Small	Original partition
	L	4,6	Intermediate	Partition extension
<b>SUPAIR Light</b>	S	3,9	Small	Original partition
	M	4,4	Intermediate	Partition extension
	L	5,2	Intermediate	Partition extension
<b>SUPAIR Shine</b>	S	2,8	Small	Original partition
	M	3,7	Small	Original partition
	L	4,8	Intermediate	Partition extension
<b>SUPAIR Fluid</b>	S	4	Small	Original partition
	M	5	Intermédiaire	Cloison et rallonge
	L	6	Big	Without partition
<b>SUPAIR Start</b>	M	6,6	Intermediate	Partition extension
	L	7,4	Big	Without partition

**Person able to perform the harness :** users, dealers, manufacturers

**Delai :** The inspection must be done immediately !

**Documents recipients :** users, dealers, school, associations